

LOCK ● A ● MATIC NO. 900 BED CANOPY FRAME

1 Assemble one half section of canopy frame at a time.
(Dotted line separates two halves.)


2 Insert cross rods into slots of curved pieces as indicated.
(SEAMS UP)

3 To lock cross rods in place, grip curved pieces at point of arrows and rotate until slots are facing up. Note diagram of assembled half section.

4 Connect assembled half sections together.

5 Place end pieces into position with curved pieces locking over ends.

6 Position bed post finials into each of the large holes at the four corners of the frame. With the help of another person, pick up frame and place on bed.

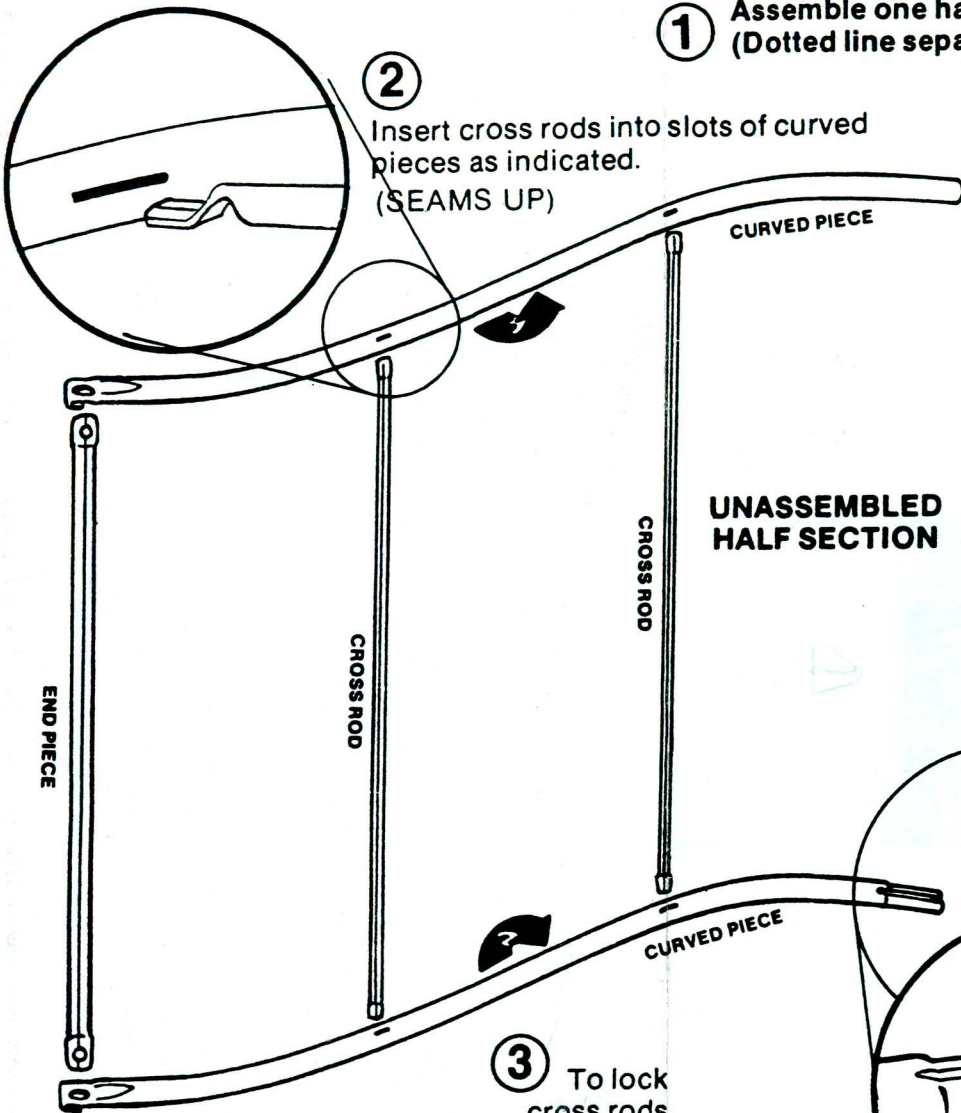

UNASSEMBLED
HALF SECTION

ASSEMBLED
HALF SECTION

