


Princess Bed Set-Up Instructions

Twin and full size bed set up options are available in the Princess Carolina Cottage collection. To set up this bed we use a hook and pin connection between the headboard and foot board. Metal pins are embedded within the headboard and foot board at two positions making it easy to switch from upper height to lower height. **(see photo below)** To set up the bed for use with a bunkie board or low profile foundation, mount the wooden side rails at the high locking position in the headboard and foot-board. Next, install the bed slats at three positions between the bed rails and secure with screws provided. Our beds rails come standard with wood slats to support a box spring/mattress or bunkie board/mattress combination and will not support a mattress only set up; you will need a foundation support for the mattress. (no slat-roll available) We recommend a bunkie board when setting up to use in the upper height pin locking positions, and standard foundation in the low lock position. Since we no longer offer the trundle unit, you may elect to use any storage unit compatible with the twin bed set-up. **(see photo below)** *Low pin lock position accommodates a standard mattress and foundation mattress combination not shown in illustration.*

(hook & pin connection)



(wood rails/slats with bunkie board & mattress)

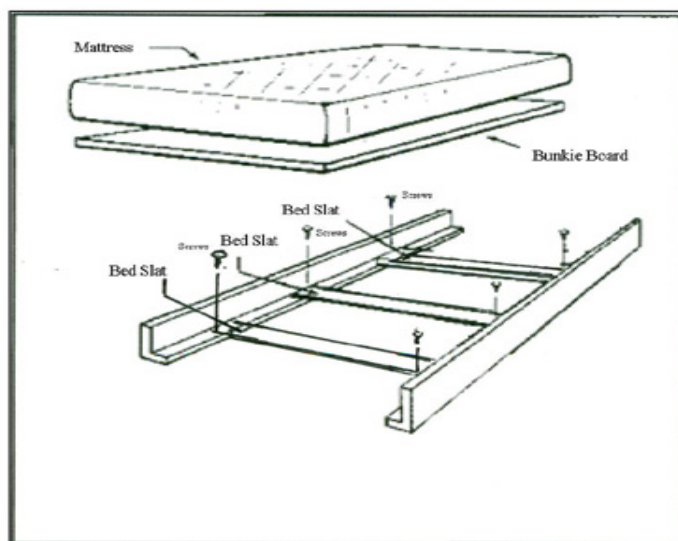

(bed rails locked high with trundle Unit)



This bed set up is designed to accommodate a bunkie board & mattress, or mattress and standard foundation using the 419400 wood rails w/slats (in full size) or the 419300 wood rails w/slats (in twin size) when setting up the headboard and foot board in combination, and may accept a compatible under bed storage unit. The options are to set up the bed high or low to accommodate various size mattress and foundation combination heights, or a compatible pull-out storage unit that accommodates a (75" length mattress) unit under a twin or full size bed that can pull out for an extra bed and then fits nicely under twin or full size beds. (Note: Under bed units normally accommodate up to a 7" thick twin mattress only - suggest to measure and see manufacture's specification)