


**Step 1:**  
**IMPORTANT:** Determine the height of the Bed Rail to the Floor before installing the Inserts.

Once installed, they cannot be removed and must be replaced.

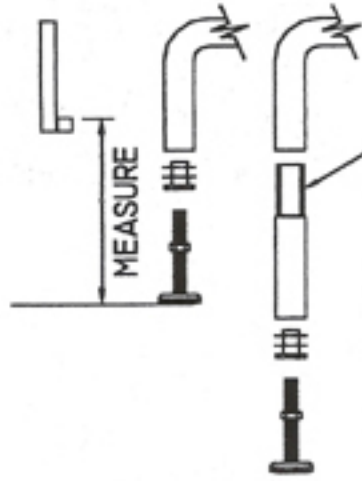

**Step 2:**  
For heights over 12", install the Insert into the Extension, otherwise install the Insert into the Support.

Tap each section together until snug.

Screw the Adjustable Glides into each Insert.


**Step 3:**  
-Place U Clip over Left and Right Supports as shown.

-Put 2 1/2" Machine Bolt through the U Clip and secure with the Wing Nut.

Do not tighten until attached to the bed.

**Step 4:**  
-Extend the two Support Assemblies until the Screw Tabs are flush with each Bed Rail and over each Support Cleat.

-Use 3/4" Screws to attach the Support Assemblies to the each Support Cleat.

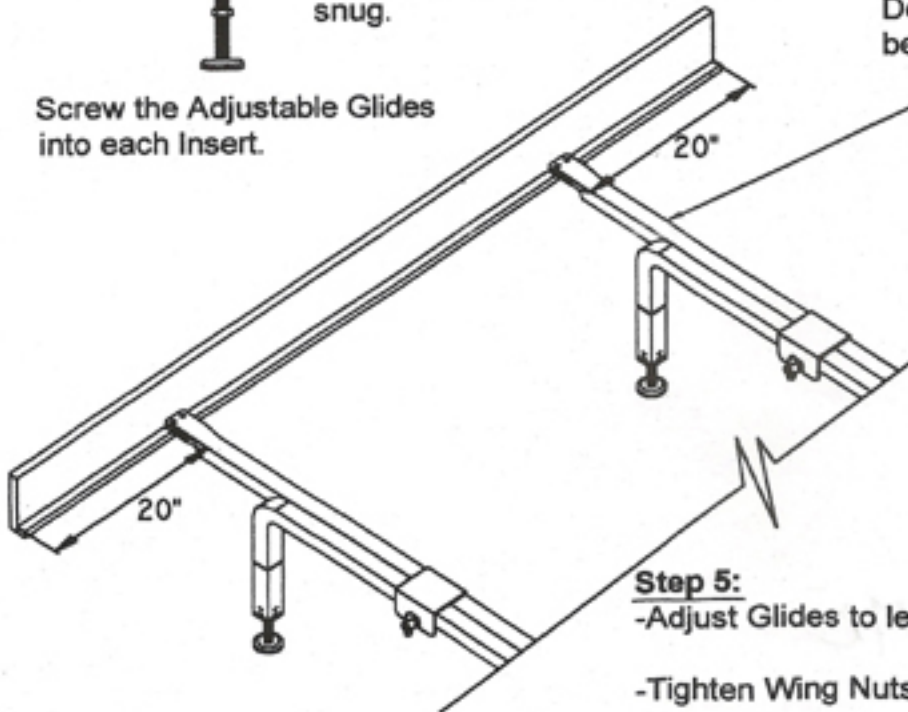

**Step 5:**  
-Adjust Glides to level the Supports.

-Tighten Wing Nuts on the U Clips.

